


Model 124 with 4MATIC

## Oil grades

Hypoid gear oil SAE 90

Refer to Factory Approved Service Products list

## Special tools

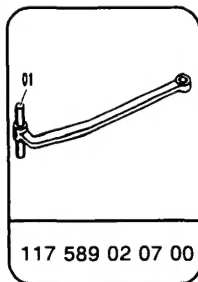

## Commercial tools

14 mm hex. driver insert, 1/2" square drive

obtain locally

**Note:** When checking oil level and changing oil, the vehicle should be in horizontal position.

When performing this job number, remove engine compartment lower panel or lower half of noise encapsulation, and reinstall after completing all maintenance jobs (refer to job number 6190 or 9490).

Remove oil filler plug.

If a minimal amount of oil runs out or if the oil level is at lower edge of opening, oil level is correct.

If not, add oil.

Install filler plug, and torque to 50 Nm.

If oil loss is excessive, determine cause and repair on separate order.

